

# HSL-46 Systems Check

## Crypto / Communication

- ❑ Key IFF Transponder. Check for correct response during self-test. Verify Mode IV with ship, if available.
- ❑ Key Hawklink. Check for correct Bit Status Word 2. Establish link with ship, if available.
- ❑ Key UHF. Perform secure comm. check, if available.
- ❑ Perform HF self-test IAW NFM 15-31. Do not conduct on deck within 50 feet of line personnel.
- ❑ Key HF. Perform secure comm. check, if available.

## Navigation

- ❑ GPS key status of 8881. Refer to WSM A-37.
- ❑ Check Doppler flags and faults clear.

## Radar / IFF Interrogator

- ❑ Check radar for proper operation. Check all modes and ranges.
- ❑ Check proper operation of RDP, if equipped.
- ❑ Check manual IFF challenge.
- ❑ Automatic IFF challenge.

## Acoustics

- ❑ SO ORT.
- ❑ Launch Active Sonobuoy IVO ship, if available.
- ❑ Ping buoy in all ping types. Check for normal visual and audio return.
- ❑ Change Depth.
- ❑ Select in OTPI and perform MOT.
- ❑ Launch Passive Sonobuoy IVO ship, if available.
- ❑ Tune OMNI in all channels. Check for normal visual and audio from each channel and both receivers.
- ❑ Tune Directional. Check for normal visual and audio.

## MAD

- ❑ Stream MAD.

- ❑ Perform altitude compensation IAW NFM 7-28.
- ❑ Perform MAD run IVO merchant ship or other metallic structure, check for correct response.
- ❑ Retrieve MAD.

## ESM

- ❑ Load SAC 2. Check faults clear.
- ❑ Upload ESM Library, if Hawklink is available.
- ❑ Verify proper operation using ship's emitters, if available.

## FLIR / Hellfire

- ❑ FLIR and Hellfire power - On.
- ❑ Perform Init/Test of FLIR and ACRT. Verify correct software version and faults clear.
- ❑ Check FLIR for proper operation. Check all FOVs.
- ❑ Insert tape in VCR. Verify operation, including audio.

## RAST

- ❑ Crewman open cargo hook door.
- ❑ RAST MASTER - ON.
- ❑ MAIN PROBE - DOWN. Status Light indicates DOWN.
- ❑ MESSENGER CABLE - DOWN. STATUS LIGHT indicates OUT.
- ❑ Crewman verify main probe down, messenger cable out.
- ❑ Raise Messenger Cable. Position switch to OFF when STATUS LIGHT indicates messenger cable IN.
- ❑ MAIN PROBE - UP. STATUS LIGHT indicates UP.
- ❑ RAST MASTER - OFF.
- ❑ Crewman close cargo hook door.

## Cargo

- ❑ Perform Cargo Hook Pre-operational Check IAW NFM 7-24.